Instructions for the use and care of your new S2/85 Zanussi Dishwasher

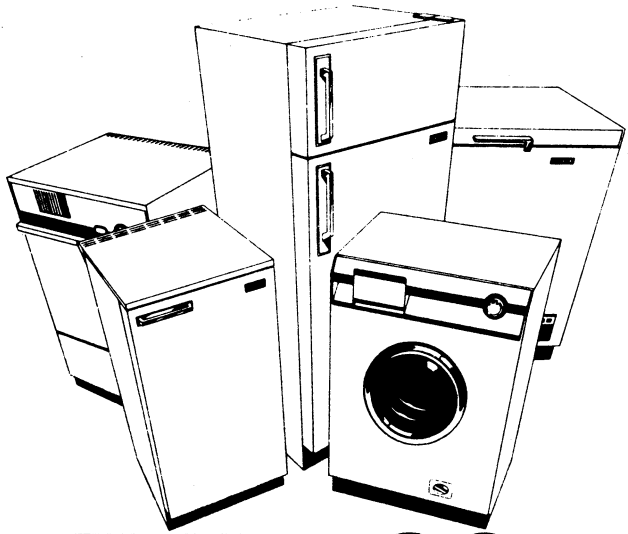

ZANUSSI

It's not what we do, it's the way that we do it.

TECHNICAL DATA

Width	23.6"
Overall Depth	23.6"
Height	33.4"
Capacity	8 Place Settings Plus Pots & Pans
Supply Voltage	220/240 V ∿, 50 Hz
Motor Rating During Washing	640 W
Heating Element Power	2020 W
imum Power Absorbed	2660 W
Water Load	2.2 Galls.
Minimum Water Pressure	7 p.s.i.
Maximum Water Pressure	110 p.s.i.

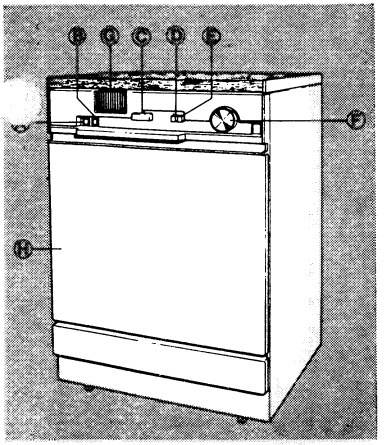

1

A. Rinse-aid Dispenser Inspection Window
B. Pilot Light
C. Door Handle
D/E Compartment Selectors
F. Programme Selector
G. Steam Vent
H. Door

INSTALLATION

UNPACKING

Remove outer carton, reinforcing angles and polythene wrapping. Open door by turning handle C (Fig. 1) anti-clockwise and remove the interior packing.

LOCATION AND LEVELLING

The dishwasher can be installed with its sides or back in contact with furniture or walls.
Drain and fill hoses can be positioned to suit the installation, as shown in Fig. 2.
Special care should be taken in levelling the machine, as this ensures tro free operation.

WATER CONNECTION

Water Inlet Hose: if a cold water tap having a 3/4" gas thread spout is available, the inlet hose fitted with rubber sealing washer should be connected as shown (Fig. 3). If no such tap is available, your retailer will supply you with a suitable tap adaptor.
If the water connection is made on to new pipes, or on to pipes which have not been used for some time, it is advisable to run off a certain amount of water before connecting the machine. This will avoid foreign matter blocking the filter placed at the end of the water inlet hose.

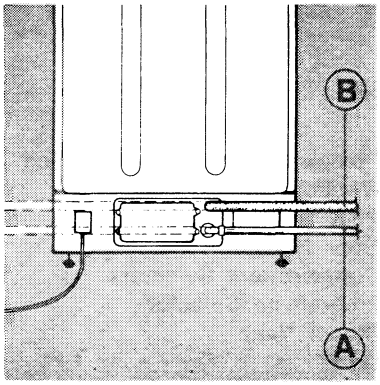

2

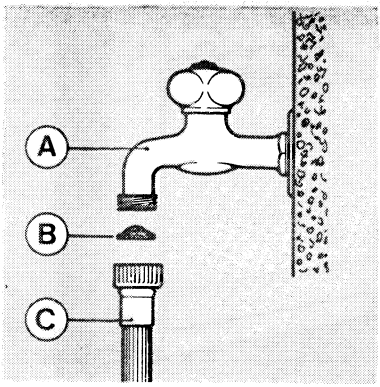

CARE AND CLEANING

FILTER CLEANING

From time to time it is recommended that the filters placed on the bottom of the tub are inspected.
The filter assembly is accessible by removing the bottom basket. First pull the small cylindrical filter out (Fig. 14) then unlock the large fine mesh filter by turning the handle A (Fig. 15) one 1/2 turn anti-clockwise.
If necessary clean the fine mesh filter with a soft brush under running water. Replace the large filter making sure it is properly positioned, and lock it by turning the handle one 1/2 turn clockwise.
Then replace the cylindrical filter.

Upper Spraying Arm Cleaning

The upper spraying arm can be easily removed and cleared of any deposit which could reduce the washing efficiency.
To do so, simply pull the upper basket out and lift the arm as shown in Fig. 16.
When replacing it make sure that the jet holes are faced upwards.
We recommend that this operation is carried out regularly, or when washing results deteriorate.

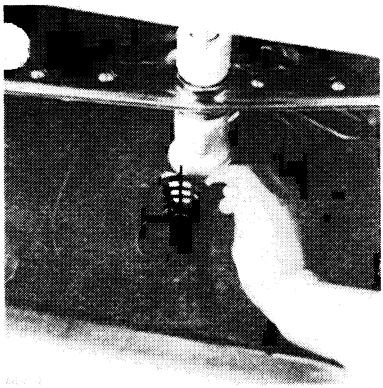

14

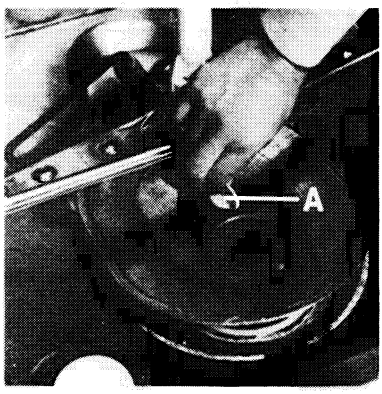

15

Cabinet Cleaning

For the cabinet exterior, use a lukewarm light solution of mild soap, then rinse and dry carefully. Do not use scouring powders or other abrasive products.

Long Idle Periods

If the machine is to be out of use for some time, it is advisable to disconnect the water and electricity supply, fill up the rinse aid container, and leave the door slightly open to allow air to circulate freely in the machine.

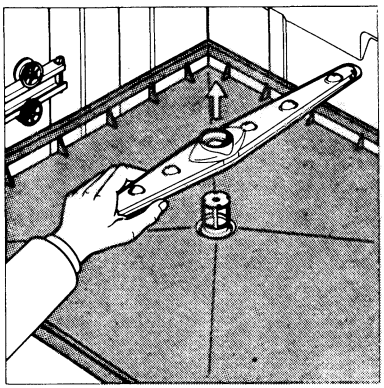

16

P1543 - 32292-0370 - 4-74